



Concept kód	Český název	Anglický název
42394304	<b>Elektronika na motoru</b> RM7000/RM7010/RM7020/RM7030/RM8010/RM7500/RM7510	<b>PCB on motor</b> RM7000/RM7010/RM7020/RM7030/RM8010/RM7500/RM7510
42394525	<b>Elektronika napájení</b> RM7510/RM7500	<b>Power PCB</b> RM7510/RM7500
42394526	<b>Elektronika ovládání</b> RM7510/RM7500	<b>Control PCB</b> RM7510/RM7500
42392623	<b>Elektronika</b> RM7000/RM7010/RM7020/RM7030/RM8010/ RM7500/RM7510	<b>PCB</b> RM7000/RM7010/RM7020/RM7030/RM8010/RM7500/ RM7510
42392624	<b>Hnětací hák</b> RM7000/RM7030/RM7500/RM7510	<b>Dough hook</b> RM7000/RM7030/RM7500/RM7510
42392625	<b>Knoflík vypínače</b> RM7000/RM7030/RM7500/RM7510	<b>Control button assembly</b> RM7000/RM7030/RM7500/RM7510
42392626	<b>Kolo převodové (malé)</b> RM7000/RM7010/RM7020/RM7030/ RM8010/RM7500/RM7510	<b>Sun gear shaft</b> RM7000/RM7010/RM7020/RM7030/ RM8010/RM7500/RM7510
42392627	<b>Kolo převodové (Velké)</b> RM7000/RM7010/RM7020/ RM7030/RM8010/RM7500/RM7510	<b>Big wheel</b> RM7000/RM7010/RM7020/RM7030/RM8010/ RM7500/RM7510
42392628	<b>Kolo převodové spodní</b> RM7000/RM7010/RM7020/ RM7030/RM8010/RM7500/RM7510	<b>Sun gear</b> RM7000/RM7010/RM7020/RM7030/RM8010/ RM7500/RM7510
42394527	<b>Kryt elektroniky ovládání kompletní</b> RM7510/RM7500	<b>Control PCB cover complete</b> RM7510/RM7500
42392630	<b>Matice mlýnku</b> RM7000/RM7010/RM7020/RM8010/RM7500/RM7510	<b>Fasteing dial</b> RM7000/RM7010/RM7020/RM8010/RM7500/RM7510
42392632	<b>Motor s převodovkou</b> RM7000/RM7010/RM7020/RM7030/ RM8010/RM7500/RM7510	<b>Motor with gearbox</b> RM7000/RM7010/RM7020/RM7030/ RM8010/RM7500/RM7510
42392633	<b>Nádoba mixéru skleněná</b> RM7000/RM8010/RM7500	<b>Blender Jar assy</b> RM7000/RM8010/RM7500
42394529	<b>Nádoba pracovní</b> RM7500	<b>Mixing bowl</b> RM7500
42392636	<b>Nůž nádoby mixéru</b> RM7000/RM7010/RM7020/RM8010/RM7500	<b>Knife of Blender Jar</b> RM7000/RM7010/RM7020/RM8010/RM7500
42392637	<b>Pěchovadlo</b> RM7000/RM8010/RM7500/RM7510	<b>Food pusher</b> RM7000/RM8010/RM7500/RM7510
42393412	<b>Pěchovadlo struhadla</b> RM7000/RM8010/RM7500/RM7510 - nové	<b>Pusher of grater</b> RM7000/RM8010/RM7500/RM7510 - new
42392639	<b>Pružina</b> RM7000/RM7010/RM7020/RM7030/RM8010/RM7500/RM7510	<b>Spring</b> RM7000/RM7010/RM7020/RM7030/RM8010/RM7500/RM7510
42392641	<b>Převodové soukolí</b> RM7000/RM7010/RM7020/RM7030/ RM8010/RM7500/RM7510	<b>Mixing seat assy</b> RM7000/RM7010/RM7020/RM7030/ RM8010/RM7500/RM7510
RM7500	<b>RM7500 Kuchyňský planetární robot 1200W ELEMENT DIGI Black</b>	<b>RM7500 Kitchen planetary machine 1200W ELEMENT DIGI Black</b>
42392642	<b>Řemen</b> RM7000/RM7010/RM7020/RM7030/RM8010/RM7500/RM7510	<b>Strap</b> RM7000/RM7010/RM7020/RM7030/RM8010/RM7500/RM7510
42393414	<b>Struhadlo hrubé</b> RM7000/RM7010/RM7020/RM8010/ RM7500/RM7510 - nové	<b>Gross grater</b> RM7000/RM7010/RM7020/RM8010/RM7500/ RM7510 - new
42393415	<b>Struhadlo jemné</b> RM7000/RM7010/RM7020/RM8010/ RM7500/RM7510 - nové	<b>Fine grater</b> RM7000/RM7010/RM7020/RM8010/RM7500/ RM7510 - new
42393416	<b>Struhadlo na brambory</b> RM7000/RM7010/RM7020/ RM8010/RM7500/RM7510 - nové	<b>Potato pancake grater</b> RM7000/RM7010/RM7020/RM8010/ RM7500/RM7510 - new
42393418	<b>Struhadlo na silné plátky</b> RM7000 /RM7010/RM7020/ RM8010/RM7500/RM7510 - nové	<b>Slices large grater</b> RM7000/RM7010/RM7020/RM8010/ RM7500/RM7510 - new

42393417	<b>Struhadlo na slabé plátky</b> RM7000 /RM7010/RM7020/ RM8010/RM7500/RM7510 - nové	<b>Slices small grater</b> RM7000/RM7010/RM7020/RM8010/ RM7500/RM7510 - new
42394528	<b>Flexi metla</b> RM7500/7510	<b>Whisk with silicon</b> RM7500/RM7510
42392649	<b>Šnek čtyřhranný</b> RM7000/RM7010/RM7020/RM8010/RM7500/RM7510	<b>Mincing screw square</b> RM7000/RM7010/RM7020/RM8010/RM7500/RM7510
42392650	<b>Tělo masomlýnku</b> RM7000/RM7010/RM7020/RM8010/RM7500/RM7510	<b>Body of mincing</b> RM7000/RM7010/RM7020/RM8010/RM7500/RM7510
42393419	<b>Tělo struhadla</b> RM7000/RM8010/RM7500/RM7510 - nové	<b>Body of grater</b> RM7000/RM8010/RM7500/RM7510 - new
42392652	<b>Těsnění nádoby mixéru</b> RM7000/RM7010/RM7020/RM8010/RM7500	<b>Seal of blender jar</b> RM7000/RM7010/RM7020/RM8010/RM7500
42392653	<b>Víko nádoby pracovní</b> RM7000/RM7010/RM7020/RM7030/RM7500/RM7510	<b>Lid of mixing bow</b> RM7000/RM7010/RM7020/RM7030/RM7500/RM7510
42392654	<b>Víko s odměrkou nádoby mixéru</b> RM7000/RM8010/RM7500	<b>Lid with measuring cup of blender jar</b> RM7000/RM8010/RM7500
42392655	<b>Vnitřní kolo</b> RM7000/RM7010/RM7020/RM7030/RM8010/ RM7500/RM7510	<b>Inner wheel</b> RM7000/RM7010/RM7020/RM7030/RM8010/ RM7500/RM7510
42392656	<b>Vstupní hřídel ozubená</b> RM7000/RM7010/RM7020/ RM7030/RM8010/RM7500/RM7510	<b>Input gear B</b> RM7000/RM7010/RM7020/RM7030/RM8010/ RM7500/RM7510
42392657	<b>Výměnný kotouč hrubý</b> RM7000/RM7010/RM7020/RM8010/RM7500/RM7510	<b>Mincing discs coarse</b> RM7000/RM7010/RM7020/RM8010/RM7500/RM7510
42392658	<b>Výměnný kotouč jemný</b> RM7000/RM7010/RM7020/RM8010/RM7500/RM7510	<b>Mincing discs fine</b> RM7000/RM7010/RM7020/RM8010/RM7500/RM7510
42392659	<b>Výměnný kotouč střední</b> RM7000/RM7010/RM7020/RM8010/RM7500/RM7510	<b>Mincing discs medium</b> RM7000/RM7010/RM7020/RM8010/RM7500/RM7510
42394160	<b>Výrobník cukroví</b> RM7000/RM7010/RM8010/RM7500/RM7510	<b>Candy maker</b> RM7000/RM7010/RM8010/RM7500/RM7510
42393421	<b>Zásobník těla masomlýnku</b> RM7000/RM7010/RM7020/RM8010/RM7500/RM7510	<b>Feeding tray of meat grinder</b> RM7000/RM7010/RM7020/RM8010/RM7500/RM7510
42392660	<b>Zátka</b> RM7000/RM7010/RM8010/RM7500/RM7510	<b>Cork</b> RM7000/RM7010/RM8010/RM7500/RM7510
42394619	<b>Šlehací metla celokovová</b> RM7500/RM7510	<b>Whisk full metal</b> RM7500/RM7510
42394530	<b>Nádoba pracovní</b> RM7510	<b>Mixing bowl</b> RM7510